

EXHIBIT 1



3955680



AUTOMATIC WASHER WITH CALYPSO® WASH MOTION

Use & Care Guide

For questions about features, operation/performance,
parts, accessories or service call: 1-800-253-1301.
In Canada, for assistance call: 1-800-481-5581,
for installation and service call: 1-800-807-6777
or visit our website at:
www.whirlpool.com or www.whirlpool.ca

LAVADORA AUTOMÁTICA CON MOVIMIENTO DE LAVADO CALYPSO®

Manual de Uso y Cuidado

Para consultas respecto a características, operación/desempeño,
partes, accesorios o servicio técnico, llame al: 1-800-253-1301.
En Canadá, para obtener asistencia llame al: 1-800-481-5581,
para la instalación y servicio llame al: 1-800-807-6777
o visite nuestra página de internet:
www.whirlpool.com o www.whirlpool.ca

LAVEUSE AUTOMATIQUE À MOUVEMENT DE LAVAGE CALYPSO®

Guide d'utilisation et d'entretien

Pour des questions à propos des caractéristiques, du fonctionnement/de
la performance, des pièces, des accessoires ou du service,
composez le 1-800-253-1301.

Pour assistance au Canada, composez le 1-800-481-5581,
pour installation et service, composez le 1-800-807-6777
ou visitez notre site Internet à:
www.whirlpool.com ou www.whirlpool.ca

Table of Contents/Index/Table des matières... 2



BEST AVAILABLE COPY

TABLE OF CONTENTS

WASHER SAFETY	3	Pausing or Restarting	12
INSTALLATION REQUIREMENTS	4	Changing Cycles and Options	12
Tools and Parts	4	Cycles	12
Location Requirements	4	What Happens In a Wash Cycle	13
Drain System	5	Options	14
Electrical Requirements	6	LAUNDRY TIPS	16
INSTALLATION INSTRUCTIONS	7	Loading	16
Install Leveling Feet	7	WASHER CARE	17
Connect Drain Hose	7	Cleaning Your Washer	17
Connect Inlet Hoses	8	Water Inlet Hoses	17
Secure Drain Hose	8	Vacation, Storage, and Moving Care	17
Level Washer	8	TROUBLESHOOTING	18
Complete Installation	9	LID INSTRUCTIONS	21
FEATURES AND BENEFITS	10	ASSISTANCE OR SERVICE	22
CALYPSO® Wash Motion	10	In the U.S.A.	22
WASHER USE	11	In Canada	22
Starting Your Washer	11	WARRANTY	23
Using the Proper Detergent	11		

ÍNDICE

SEGURIDAD DE LA LAVADORA	25	Cómo detener o volver a poner en marcha	34
REQUISITOS DE INSTALACIÓN	26	Cambio de ciclos y opciones	34
Herramientas y partes	26	Ciclos	34
Requisitos de ubicación	27	Lo que ocurre en un ciclo de lavado	35
Sistema de desagüe	27	Opciones	36
Requisitos eléctricos	28	CONSEJOS DE LAVANDERÍA	38
INSTRUCCIONES DE INSTALACIÓN	29	Cómo cargar	38
Cómo instalar las patas niveladoras	29	CUIDADO DE LA LAVADORA	38
Cómo conectar la manguera de desagüe	29	Limpeza de su lavadora	38
Cómo conectar las mangueras de entrada	30	Mangueras de entrada de agua	39
Cómo asegurar la manguera de desagüe	31	Cuidado para las vacaciones, almacenaje o en caso de mudanza	39
Cómo nivelar la lavadora	31	SOLUCIÓN DE PROBLEMAS	39
Complete la instalación	31	INSTRUCCIONES DE LA TAPA	43
CARACTERÍSTICAS Y BENEFICIOS	32	AYUDA O SERVICIO TÉCNICO	44
Movimiento de lavado CALYPSO®	32	En los EE.UU.	44
USO DE LA LAVADORA	33	En Canadá	44
Puesta en marcha de su lavadora	33	GARANTÍA	45
Uso de detergente adecuado	33		

TABLE DES MATIÈRES

SÉCURITÉ DE LA LAVEUSE	46	Pause ou remise en marche	55
EXIGENCES D'INSTALLATION	47	Changement des programmes et options	55
Outillage et pièces	47	Programmes	55
Exigences de l'emplacement d'installation	47	Ce qui se produit au cours d'un programme de lavage	57
Système de vidange	48	Options	57
Spécifications électriques	48	CONSEILS DE LESSIVAGE	59
INSTRUCTIONS D'INSTALLATION	50	Chargement	59
Installation des pieds de nivellement	50	ENTRETIEN DE LA LAVEUSE	60
Raccordement du tuyau de vidange	50	Nettoyage de la laveuse	60
Raccordement des tuyaux d'arrivée d'eau	51	Tuyaux flexibles d'alimentation de la laveuse	60
Immobilisation du tuyau de vidange	51	Préparation avant les vacances, un entreposage ou un déménagement	60
Réglage de l'aplomb de la laveuse	52	DÉPANNAGE	61
Achever l'installation	52	INSTRUCTIONS SOUS LE COUVERCLE	64
CARACTÉRISTIQUES ET AVANTAGES	53	ASSISTANCE OU SERVICE	66
Mouvement de lavage CALYPSO®	53	Aux États-Unis	66
UTILISATION DE LA LAVEUSE	54	Au Canada	66
Mise en marche de la laveuse	54	GARANTIE	67
Utilisation du détergent approprié	54		

Rinse

- Rinsing is accomplished in the same manner as washing. Fresh water is added to a slow spinning load. Then the load moves through the spray rinses. The water is then drained away and the rinsing process is repeated. The number of rinses varies depending on the cycle.
- During the last rinse, fabric softener is dispensed into the bottom of the tub and applied to the load.

Final Spin

- The last of the rinse water is drained and the load is spun. The amount of spinning depends on the cycle selected.

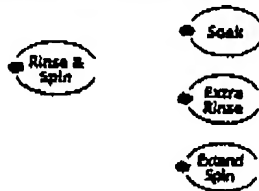
To make unloading easy, the load is peeled off the sides of the basket by the CALYPSO® wash motion.

Normal Sounds

As with any new product, you will hear sounds that you are not accustomed to. You may hear various sounds occurring during the washing, rinsing and spinning process. Between changes in wash actions, there will be momentary pauses. You will hear water spraying and splashing during the wash and rinse cycles. These new sounds and pauses are part of normal washer operation. See "Troubleshooting."

Options

Use options to customize your wash cycles.

**Rinse & Spin**

Use this option to get a combination of rinses and spins followed by a high-speed spin. The time display will include an estimate of how long it will take to fill and drain the washer. Fabric softener can be added to the Fabric Softener dispenser.

When to use Rinse & Spin

- For loads that need rinsing only.
- For completing a cycle after the power has been off.
- To add fabric softener to load.

To use or change Rinse & Spin settings:

1. Add fabric softener to the dispenser (if desired).
2. Press the RINSE & SPIN control until the RINSE & SPIN indicator light glows.
3. Press START.

Soak

Use this option for set-in stains and soil that need extra time for removal. Soaking in this washer is different than in a conventional washer. The washer sprays the load with water and detergent for 4 minutes at extra low spin speed followed by a brief period of wash action at the speed of the selected cycle. Then another 4 minutes of spraying and extra low spinning occurs. The wash action then pauses for the detergent to work on the soils. The SOAK feature is followed by the selected cycle. Using SOAK will extend your wash cycle by 16 minutes.

Extra Rinse

Selecting this option provides a second rinse with the same water temperature as selected for the first rinse. An Extra Rinse can be added to any wash cycle.

Extend Spin

This option adds an additional 3 minutes of spin to any cycle to reduce drying time and save energy. If you select EXTEND SPIN and do not select a wash cycle, you will get an 8 minute, high-speed spin.

Wash/Rinse Temp

Select a water temperature based on the type of load you are washing. Use the warmest wash water safe for fabrics. Follow garment label instructions.

Warm rinses leave the loads dryer than cold rinses. Warm rinses increase wrinkling. In cold climates, a warm rinse makes the load more comfortable to handle. Cold rinses save energy.

Temperature Guide

Wash Water Temperature	Suggested Fabrics
HOT	Whites and pastels Heavy soils
WARM	Bright colors Moderate to light soils
COLD	Colors that bleed or fade Light soils

In wash water temperatures colder than 60°F (15.5°C), detergents do not dissolve well. Soils may be difficult to remove.